



## ELECTRONIC CONTROL PANEL

|   |                     |
|---|---------------------|
|   |                     |
| 1 | FAN GRID            |
| 2 | FAN                 |
| 3 | CONTROL PANEL CABLE |

|    |                                                                        |
|----|------------------------------------------------------------------------|
| 4  | MAINS POWER SUPPLY CABLE                                               |
| 5  | BUS CABLE                                                              |
| 6  | FEED STATUS CABLE                                                      |
| 7  | INTERNAL POWER SUPPLY CABLE                                            |
| 8  | ROTATION STATUS CABLE                                                  |
| 9  | ELECTRONIC ROTATION CARD                                               |
| 10 | DRIVE CABLE                                                            |
| 11 | FEED SETTING CABLE                                                     |
| 11 | ROTATION SETTING CABLE                                                 |
| 12 | ELECTRONIC FEED CARD                                                   |
| 13 | COMPLETE POWER SUPPLY CARD                                             |
| 14 | RELAY                                                                  |
| 15 | MAIN BOARD                                                             |
| 16 | CONTROL PANEL UPPER CASING                                             |
| 17 | FRONT PANEL (ONLY WITH ELT C 047)                                      |
|    | ELECTRONIC DISPLAY CARD                                                |
| 18 | "ON" SWITCH CONTACT                                                    |
| 19 | "ON" SWITCH SHELL (EXTERNAL LUMINOUS GREEN BUTTON)                     |
| 20 | EXTERNAL "OFF" SHELL (EMERGENCY BUTTON)                                |
| 21 | "OFF" SWITCH CONTACT                                                   |
| 22 | ROTATION/FEEDING SELECTOR SHELL (SELECTOR HEAD ON-OFF-ON)              |
| 23 | ROTATION/FEEDING POTENTIOMETER SHELL<br>(REVOLUTION COUNTER KNOB D.23) |
| 24 | RAPID BUTTON SHELL (RED BUTTON)                                        |
| 25 | RIGHT/LEFT ROTATION/FEEDING SELECTOR CONTACT                           |
| 26 | ROTATION/FEEDING POTENTIOMETER                                         |
| 27 | RAPID BUTTON CONTACT                                                   |
| 28 | CONTROL PANEL SUPPORT GROUP                                            |
| 29 | CONTROL PANEL HANDLE                                                   |
| 30 | CONTROL PANEL BOTTOM CASING                                            |
| 31 | CONTROL PANEL SIDE CASING                                              |
| 32 | CONTROL PANEL BACK CASING                                              |